



## Savage A40 Air - Welding Helmet Instructions

**These instructions must be read in full before operating the equipment. Failure to follow these instructions completely may result in reduced or no protection at all.**

These Instructions cover Savage A40 Air welding helmet when used with ESAB PAPR (Powered Air-Purifying Respirator).

These instructions must be read in conjunction with the Savage A40 Welding Helmet User Instructions supplied with each Welding helmet and the user instructions supplied with each ESAB PAPR.

### **Savage A40 air welding helmet and ESAB PAPR**

ESAB Part Number	Description
0700500400	Savage A40 Air Black Replaceable Battery
0700002300	ESAB PAPR with Standard Hose 850mm
0700002301	ESAB PAPR with Long Hose 1000mm

### **Standards:**

When used in accordance with the manufacturer's instructions, the Savage A40 Air, and the above listed ESAB PAPR units, conform to EN 12941:1998+A2:2008.

CE examination by: BSI Group, UK (0086 Notified Body number)

### **Donning the welding head piece:**

- The head harness may be adjusted by following the instructions as detailed in the user instructions supplied with the helmet.
- Fit the head harness on the head and tighten the ratchet by rotating the wheel at the back of the head harness clockwise.
- Cover the front of the head with the face seal and tighten the strap.
- Ensure that the head cover is pulled down as far as possible at the back of the head.
- If necessary, enlist the help of another person to ensure best-fit and minimal gaps.

**IMPORTANT NOTE**, the user must ensure that the face seal strap in contact with the user's face is in front of the user's ears and not covering them.


### **Storage & Transportation:**

When not in use or during transportation, the helmet and PAPR units should be stored in the container in which they were provided, or other similar container, such that they are out of direct sunlight, not in contact with solvents and cannot be damaged by physical contact with hard surfaces/items. Do not store outside the temperature range of +0°C to +40°C or with humidity above 75%RH.

## Spares:

### Savage A40 Air welding helmet

- 1. Head/Face seal 0700500405
- 2. Head Gear including Air Duct 0700500404

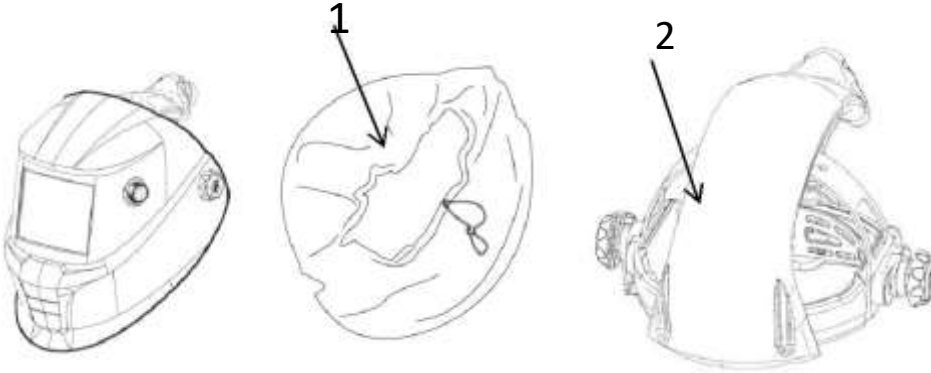

Other helmet spare parts are available in the helmet instruction manual

The PAPR spare parts are listed in table below:

Ordering no.	Description	Notes
0700 002 303	Proban hose cover long	1000 mm
0700 002 304	Proban hose cover standard	850 mm
0700 002 305	Air hose standard	850 mm
0700 002 306	Air hose long	1000 mm
0700 002 307	Comfort belt	
0700 002 308	Motor unit	
0700 002 309	P3 filter	
0700 002 310	Pre-filter Pk 5	
0700 002 311	Intelligent charger	
0700 002 312	Battery	
0700 002 313	Battery HD	
0700 002 314	Flexi hose	